## FRONIUS IG INVERTERS

ARTICLE DESCRIPTION	ARICLE NO.

Fronius IG 15 4,200,001
Fronius IG 20 4,200,002
Fronius IG 30 4,200,003
Fronius IG 40 4,200,004
Fronius IG 60 HV 4,200,006

Indoor housing for

Fronius IG 15/20/30 with display 44,0240,1001



Outdoor housing for

Fronius IG 15/20/30 with display 44,0240,1005



Indoor housing for

Fronius IG 40/60 HV with display 44,0240,1002



Outdoor housing for

Fronius IG 40/60 HV with display 44,0240,1006





## **CONNECTION VARIATIONS**

According to your needs, the connection area can be carried out with screw terminal (= basic version) or plugs. DC-plugs of the company MultiContact in two versions (MC 3, MC 4) or from Tyco; up to five strings per inverter.

AC-screw terminal (= basic version)

DC-plugs & AC-screw terminal

DC- & AC-plugs

DC-plugs for Fronius IG Outdoors



ARTICLE DESCRIPTION	ARICLE NO.

Screw terminal = basic version 44,0240,3000

ARTICLE DESCRIPTION	ARICLE NO. MC3	ARICLE NO. MC4	ARICLE NO. Tyco
1 DC-plug + AC-screw terminal	44,0240,3001	44,0240,3041	44,0240,3021
2 DC-plugs + AC-screw terminal	44,0240,3002	44,0240,3042	44,0240,3022
3 DC-plugs + AC-screw terminal	44,0240,3003	44,0240,3043	44,0240,3023
4 DC-plugs + AC-screw terminal	44,0240,3004	44,0240,3044	44,0240,3024
5 DC-plugs + AC-screw terminal	44,0240,3005	44,0240,3045	44,0240,3025
1 DC-plug + 1 AC-plug	44,0240,3006	44,0240,3046	44,0240,3026
2 DC-plugs + 1 AC-plug	44,0240,3007	44,0240,3047	44,0240,3027
3 DC-plugs + 1 AC-plug	44,0240,3008	44,0240,3048	44,0240,3028
4 DC-plugs + 1 AC-plug	44,0240,3009	44,0240,3049	44,0240,3029
5 DC-plugs + 1 AC-plug	44,0240,3010	44,0240,3050	44,0240,3030
1 DC-plug Fronius IG Outdoors	44,0240,3011	44,0240,3051	44,0240,3031
2 DC-plugs Fronius IG Outdoors	44,0240,3012	44,0240,3052	44,0240,3032
3 DC-plugs Fronius IG Outdoors	44,0240,3013	44,0240,3053	44,0240,3033
4 DC-plugs Fronius IG Outdoors	44,0240,3014	44,0240,3054	44,0240,3034
5 DC-plugs Fronius IG Outdoors	44,0240,3015	44,0240,3055	44,0240,3035



# FRONIUS IG CENTRAL INVERTERS

Central inverter with MIX<sup>TM</sup>-Concept for photovoltaic systems from 24 kWp upwards.

Fronius IG 300 Fronius IG 400 Fronius IG 500	4,200,504 4,200,501 4,200,502	
Top Cover IP 20	44,0240,5100	
Top Cover IP 43	44,0240,5101	
Socket steel (= basic version)	44,0240,5001	
Socket stainless (extra charge)	44,0240,5002	
Supply Air Option Fronius IG Central Inverters	44,0240,5102	00
Non-return flap for Fronius IG Central Inverters	42,0200,1011	00
Personal Display Card integrated for Fronius IG Central Inverters	4,240,017	
Extension for RS-232 connection for Fronius IG Central Inverters	4,001,655	
Pipe connection for Fronius IG Central Inverters (250>224 mm)	42,0201,2375	



## FRONIUS SYSTEM MONITORING

#### Fronius Com Card

Network interface card for each Fronius IG which is part of a data communication system. Each Fronius Com Card can supply power for up to three additional components. For the supply of more than three components per Com Card an additional power supply is required.

ARTICLE DESCRIPTION	ARICLE NO.
---------------------	------------

Fronius Com Card integrated\*) 4,240,001 Fronius Com Card retrofit\*\*) 4,240,001,Z



### Fronius Datalogger Card & Box

Responsible for data administration and data storage. You can choose the version "easy" (for systems with only 1 Fronius IG inverter) and version "pro" (for systems with up to 100 Fronius IG inverters and up to 10 Sensor Cards). The Card fits for short distances between the inverter and the PC, the Box fits for longer distances (~25m).

ARTICLE DESCRIPTION	ARICLE NO.

Fronius Datalogger Card easy integrated\*) 4,240,003
Fronius Datalogger Card easy retrofit\*\*) 4,240,003,Z
Fronius Datalogger Card pro integrated\*) 4,240,002
Fronius Datalogger Card pro retrofit\*\*) 4,240,002,Z



Fronius Datalogger Box easy 4,240,103 Fronius Datalogger Box pro 4,240,102



#### Definition:

\*) integrated: Card is already integrated in the inverter on delivery

\*\*) retrofit: Card for retrofitting



## FRONIUS SYSTEM MONITORING

### Fronius Datalogger Web

Network-compatible Datalogger with the functionality of a small web server. Transforms the information data of a pv-system automatically into a website and enables data visualisation via Fronius Solar.access, via the Datalogger Website itself and also via Fronius Solar.web.

ARTICLE DESCRIPTION ARICLE NO.

Fronius Datalogger Web 4,240,122



#### Fronius Interface Card & Box

Has a serial interface with an open data protocol that enables the latest PV data to be downloaded from the inverter and processed. This will have following advantages:

- Integration of system data in other IT systems (building control, alarm systems,...)
- Data transfer to PC for other visualisation purposes (e.g. to include PV data on a homepage)
- Interface to other data logging systems

ARTICLE DESCRIPTION	ARICLE NO.

Fronius Interface Card integrated\*) 4,240,009 Fronius Interface Card retrofit\*\*) 4,240,009,Z



Fronius Interface Box 4,240,109





# FRONIUS SYSTEM MONITORING

## Fronius Datalogger & Interface (Box)

Combination of Datalogger and Interface Card in one housing – reduces costs and installation time; created especially for PV systems that shall be equipped with a data communication system for the first time.

ARTICLE DESCRIPTION ARICLE NO.

Fronius Datalogger & Interface (Box) 4,240,105



Definition:

\*) integrated: Card is already integrated in the inverter on delivery

\*\*) retrofit: Card for retrofitting

### Fronius Sensor Card & Box

Enables the connection of sensors for the determination of additional data, e.g. weather data.

ARTICLE DESCRIPTION ARICLE NO.

Fronius Sensor Card integrated\*) 4,240,004 Fronius Sensor Card retrofit\*\*) 4,240,004,Z



Fronius Sensor Box 4,240,104





## FRONIUS SYSTEM MONITORING

### **Power Supply**

The power supply for DATCOM is plugged on one component and supplies the remaining components. This product is only required if more than three components per Com Card are integrated in the DATCOM-system.

ARTICLE DESCRIPTION ARICLE NO.

Power supply 43,0001,1194



Definition:

\*) integrated: Card is already integrated in the inverter on delivery

\*\*) retrofit: Card for retrofitting

#### Fronius String Control

This component is an optional part of the Fronius Data communication (DATCOM) and has been developed especially for large pv systems working with Fronius IG 300, 400 and Fronius IG 500 central inverters. One Fronius String Control enables the monitoring of up to 25 module strings.

ARTICLE DESCRIPTION ARICLE NO.

Fronius String Control 4,240,110





## FRONIUS SYSTEM MONITORING

#### Connection variation for Fronius String Control

According to your needs with DC-plugs of the company MultiContact in two different versions (MC 3, MC 4) or from the company Tyco; (for 10, 15, 20 or 25 strings).



Note: The fuses required are NOT included. Please use commercially available industrial fuses that are approved for the direct voltage of the strings. Every fuse should be selected so that its rated current is at least 1.5 times the short-circuit amperage of the string to be protected.

ARTICLE DESCRIPTION ARICLE NO. MC3 ARICLE NO. MC4 ARICLE NO. Tyco

Connection area Fronius String Control 44,0240,3110 44,0240,3120 44,0240,3130

#### Industrial fuses for direct voltage

When selecting fuses please pay attention both to their appropriate rated current and also to their dimensions and dielectric strength. Fuses available from Fronius:

ARTICLE DESCRIPTION	ARICLE NO.	
Industrial fuse; rated current 5 A	41,0007,0205	
Industrial fuse; rated current 8 A	41,0007,0223	
Industrial fuse; rated current 10 A	41,0007,0207	
Industrial fuse; rated current 15 A	41,0007,0217	
Industrial fuse; rated current 20 A	41,0007,0200	



### Fronius Public Display

Display for the visualisation of PV system data in public areas.

ARTICLE DESCRIPTION ARICLE NO.

Fronius Public Display 4,240,306





## FRONIUS SYSTEM MONITORING

## Fronius Public Display Card & Box

Card and Box are compatible with all displays of the company RICO. For short distances between inverter/s and display please choose the Card, for longer distances (~20-30 m) please choose the Box.

ARTICLE DESCRIPTION ARICLE NO.

Public Display Card integrated\*) 4,240,006

Public Display Card retrofit\*\*) 4,240,006,Z



Public Display Box 4,240,106



#### Definition:

\*) integrated: Card is already integrated in the inverter on delivery

### Fronius Personal Display

Wireless display in compact format for data transmission of up to 15 Fronius IG inverters.

**Note:** The Fronius Personal Display is only compatible with inverters from serial number 14330071 (and higher). The use of a Personal Display does not require the integration of a Com Card or Fronius Datalogger.

ARTICLE DESCRIPTION ARICLE NO.

Fronius Personal Display 4,240,107





<sup>\*\*)</sup> retrofit: Card for retrofitting

## FRONIUS SYSTEM MONITORING

#### Fronius Personal Display Card (incl. antenna)

Plug in card for each Fronius IG inverter whose data shall be transmitted to the Personal Display (the required antenna is enclosed to the Card).

ARTICLE DESCRIPTION ARICLE NO.

Fronius Personal Display Card integrated\*) 4,240,007 Fronius Personal Display Card retrofit\*\*) 4,240,007,Z



### Fronius Signal Card

Emission of an audio-visual warning in case of a state change / malfunctions at the PV system. As the Signal Card works self-sufficient, there is no Com Card required.

Note: The Fronius Signal Card is only compatible with inverters from serial number 14330071 (and higher).

ARTICLE DESCRIPTION ARICLE NO.

Fronius Signal Card integrated\*) 4,240,012 Fronius Signal Card retrofit\*\*) 4,240,012,Z



#### Definition:

- \*) integrated: Card is already integrated in the inverter on delivery
- \*\*) retrofit: Card for retrofitting



## FRONIUS SOFTWARE

#### Fronius Solar.configurator

The software supports you in the best possible way to get the perfect sizing of pv systems. Even complex systems can be dimensioned easily.

ARTICLE DESCRIPTION ARICLE NO.

Fronius Solar.configurator no




#### Fronius Solar.access

Software for PC/Laptop; for the professional visualisation of PV system data. Enables the administration of up to 100 Fronius IG inverters. A CD with the software is enclosed to the data logger for free.

ARTICLE DESCRIPTION ARICLE NO.

Fronius Solar.access no

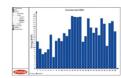

### Fronius Solar.message

The software enables the sending of warning messages in form of a message on your PC screen, via Fax, as SMS or via E-mail.

ARTICLE DESCRIPTION ARICLE NO.

Fronius Solar.message no

#### Fronius Solar.interface

This programme is the counterpart to the Fronius Interface Card / Box and supports potential developers to design an own counterpart for subsequent processing of PV system data.

ARTICLE DESCRIPTION ARICLE NO

Fronius Solar.interface no



# **ACCESSORIES**

#### Sensors

ARTICLE DESCRIPTION	ARICLE NO.	
Ambient temperature sensor PT 1000	43,0001,1188	_
Module temperature sensor PT 1000	43,0001,1190	9—
Irradiation sensor	43,0001,1189	
Wind sensor	42,0411,0027	

## DC-isolating boxes

The DC-isolating boxes are designed for the use in grid connected photovoltaic systems with several strings of solar modules. With the integrated DC-isolator, the inverter can be turned to zero-potential in case of service work.

ARTICLE DESCRIPTION	ARICLE NO.	
DC-isolating box for Fronius IG 15/20/30	42,0300,2438	
DC-isolating box for Fronius IG 40/60 (HV) with integrated DC-fuses	42,0300,2672	<u> </u>



# **ACCESSORIES**

### **MODEMS**

To realise perfect remote system monitoring, Fronius recommends the usage of the following modem.

ARTICLE DESCRIPTION ARTICLE NO.

TIXI Message Modem analog (AT V.90) 41,0018,0037



